



**T**ec**T**ronix **S**ystems inc.

**Operating Instructions**  
**GENIUS Control Unit**

9 - 18812 96<sup>th</sup> Avenue  
Surrey, BC Canada, V4N 3R1  
Tel: (001) 604 607-6028 Fax: (001) 604 607-6026  
e-mail: [service@metal-shark.com](mailto:service@metal-shark.com)

**Customer Name:** \_\_\_\_\_

**Location:** \_\_\_\_\_

**Date in Service d/m/y:** \_\_\_\_\_

We would like to take this opportunity to thank you for purchasing your Metal Detector from TecTronix. The confidence you have placed in our product is sincerely appreciated and we will endeavour to provide the best service and support possible.

Please take the time to read the User Manual completely as this provides you with the expertise necessary to install and adjust the system according to your requirements. In addition to this, you will learn about the sophisticated options provided by the **Genius** electronics.

If you have any problems in the set up and operation of your system, the TecTronix team are available to assist you.

TecTronix Systems inc.  
26688 56<sup>th</sup> Avenue  
Langley, British Columbia  
Canada, V4W 3X5

Telephone: (001) 604 607-6028  
Fax: (001) 604 607-6026  
E-mail: [service@tlectronixsystems.com](mailto:service@tlectronixsystems.com)



## Installation Do's and Don'ts

### Electrical

**- Do Not cut the connector or the power cables**

These cables are equipped with special double shields and connectors and must not be cut. If you require longer or shorter cables please order them from our parts department. The electrical cables are approximately 10 feet (3m) in length and the connector cables are 26 feet (8m). It is therefore recommended that consideration be given to where the connection boxes are located and that all cables be installed in conduit.

**- Do Not weld in reasonable proximity to the metal detector**

Welding in the vicinity of the metal detector will trigger faults.

**- Run a clean, constant voltage power supply from the main to the control panel**

Voltage fluctuations can cause false tripping therefore a constant voltage transformer is highly recommended.

**- Do Not install the metal detector near MCC's or control panels**

Stray fields can trigger faults

**- Run the connector cables to the metal detector separately**

Connector cables are part of the metal detector and have to be protected against noise. It is highly recommended to run them in a dedicated conduit. Both cables can be run in the same conduit. The conduit should be metal but, must be grounded. If the conduit is to be connected at the transmit/receive boxes on the coil and/or the control panel, all fittings must be plastic.

**- Do Not install the detection coil inside an electromagnetic field (strong power supply fluctuations)**

Interferences can trigger faults. For example; Where units are installed in close proximity to chipper motors, when under high amperage draw, can cause nuisance or false tripping and this may require the fabrication of a shield.

**- Do Not disconnect the metal detector from the power supply main**

A constant, uninterrupted power supply enables more sensitive adjustments. Powering the unit on and off causes it to recalibrate during which time metal will not be detected.

**- When welding, do not use the control panel mounting surface as a ground**

### Mechanical

**- Do Not use conductive (Anti-Static) belt material**

Non-conductive belt material is preferred. When splicing belts, use a "Finger over Finger" splice for best results. Ensure all surfaces are clean and free of debris at the splice.

**- Vibration less installation of the detector coil (except "VT")**

Higher sensitivities can be attained and maintained if the operating conditions are optimal. Ensure the coil is mounted to a structure that is stationary at all times.

**- Eliminate loose metal to metal connections near or within the detection field**

Intermittent metal to metal contacts from such things as roller axis, loose bolted connections, or broken welds can cause the metal detector to *false trip* especially on the higher sensitivity settings.

**- Vibration less installation of the Control Panel**

Mount the control panel on a vibration free surface. Vibration can cause premature electronic component failure.

**- Avoid cable whiplash.....**

On "VT" Vibratory Conveyor installations, use the supplied cable clamps and tie wraps to secure the cables to the metal detector housing. Doing so will avoid *whip lash* at the transmit/receive box strain relief connections. In addition to this we recommend that you loop the cables as they exit the conduit. These loops will then flex as the conveyor cycles. It is also advisable to follow this procedure on belt conveyor installations.

**- Do Not touch the sensor/coil surface of the detector**

Mechanical contacts may cause detection errors. Keep the sensing surface free of debris.

**- Mount the FLAT PLATE type coils as close as possible to the underside of the vibrating conveyor or belt conveyor**

The closer the coil to the product being conveyed, the greater the sensitivity. Do not allow material to build up on the sensing face so that it touches the conveyor pan. Doing so creates a closed conductive loop and the metal detector will *false trip*.

**- Isolate rollers on belt and driven roll conveyors**

On belt and roller conveyor applications where a roller is less than 24" (610mm) from the centerline of the detector, the roller must be isolated on one side to avoid the possible effect of errant static charges. Use a UHMW shim beneath the bearing and nylon washers or some other non conductive material beneath the bolt head and nut/flat washer. The bolts should also be sleeved with a non conductive material. It may be necessary to isolate more than one roller in either direction to achieve the desired results.

## Contents

<b>1</b>	<b>General information</b>	<b>6</b>
1.1	Reasons for using the Control Unit GENIUS	6
1.2	Symbols used	6
1.3	Legal basis	6
1.4	Overall view	6
<b>2</b>	<b>Technical data</b>	<b>7</b>
2.1	Performance data	7
2.2	Dimensions	8
<b>3</b>	<b>Design and method of operation</b>	<b>9</b>
3.1	Functional principle	9
3.2	Functional and control elements	10
3.2.1	GENIUS - Housing	10
3.2.2	GENIUS - Controller board STE	11
3.2.3	GENIUS - Evaluation electronics board AWE	12
<b>4</b>	<b>Safety</b>	<b>13</b>
4.1	Use to the intended purpose	13
4.2	Notification of risk	13
4.3	Risks in case of non-observance of the safety notes	13
4.4	Safety notes for the operator	13
4.5	Safety notes for operation and maintenance	13
4.6	Notes on residual risk	13
4.7	Consequences of unauthorized modification	13
4.8	Inadmissible operation	13
<b>5</b>	<b>Commissioning</b>	<b>14</b>
5.1	Mechanical Mounting	14
5.2	Connection of the equipment	14
5.2.1	Connector assignments on the controller board	14
5.2.2	Electrical connection	15
5.2.3	Electrical Performance	16
5.2.4	Electrical Connection of the equipment	17
<b>6</b>	<b>Operation / Menu structure</b>	<b>19</b>
6.1	Quick start	19
6.1.1	Setting of the most important parameters	19
6.1.2	Teach-in procedure for new product	19
6.2	Operating mask and Adjustment menu	20
6.3	Set up menu	21
6.3.1	Check of detector adjustment and software version	21
6.3.2	Event recording by the GENIUS Log book	22
6.3.3	Activation of Access Codes	22
6.3.4	Time setting	22
6.3.5	Date setting	23
6.3.6	Language setting	23
6.3.7	Serial Interface configuration (option)	23
6.3.8	Setting of Device and Line name	23
6.3.9	Setting of the unit for conveying speed	24
6.3.10	Adjustment of the Air pressure monitor (option)	24
6.3.11	Conveying speed setting with distance measurement (option belt conveyor)	24
6.3.12	Adjustment of Reject and Level monitor (option belt conveyor)	25
6.3.13	Adjustment of the Diverter position monitor (option pipe conveyor)	25
6.3.14	Adjustment of the Diverter Controller (option pipe conveyor)	26

<b>6.4</b>	<b>Product teach-in menu</b>	<b>27</b>
6.4.1	Selection of a product memory	27
6.4.2	Product parameter setting	27
6.4.2.1	Conveying speed	28
6.4.2.2	Automatic product teach-in	29
6.4.2.3	Manual setting of product parameters	30
6.4.2.4	Options for product effect equalization	30
6.4.2.5	Input / change of product name	31
6.4.2.6	Setting of the outputs	31
6.4.2.7	Activation of performance validation and scheduled testing	34
<b>6.5</b>	<b>Menu Product change</b>	<b>34</b>
<b>7</b>	<b>The use of the GENIUS metal detector for quality insurance</b>	<b>35</b>
7.1	Instruction for setting the performance test intervals	35
7.2	Carrying out a performance validation	35
<b>8</b>	<b>Errors and error remedying</b>	<b>36</b>
<b>8.1</b>	<b>Error messages</b>	<b>36</b>
8.1.1	Interface to evaluation unit interrupted	36
8.1.2	Transmitter or receiver faulty	36
8.1.3	Receiver voltage too high	36
8.1.4	Battery voltage too low	36
8.1.5	24V switching output overload	36
8.1.6	Datamemory not existing	37
8.1.7	Compressed Air	37
8.1.8	Not rejected	37
8.1.9	Reject box full	37
8.1.10	Diverter Position	37
<b>8.2</b>	<b>Undefinable activation of the switching outputs</b>	<b>38</b>
<b>8.3</b>	<b>Replacement of electronic boards</b>	<b>39</b>
8.3.1	Replacing the control electronics board	40
8.3.2	Replacing the evaluation electronics board	40
8.3.3	Replacing the display board	40
<b>9</b>	<b>Spare parts, service</b>	<b>41</b>
9.1	Spare parts view	41
9.2	Spare parts list	41
9.3	Accessories	41
9.4	Service address	42
<b>10</b>	<b>Shipping, transport, storing, preservation</b>	<b>43</b>
<b>11</b>	<b>Index</b>	<b>44</b>

## 1 General information

### 1.1 Reasons for using the Control Unit GENIUS

- Product liability
- ISO 9000
- TQM (Total Quality Management)
- Protection of consumers and of machines

### 1.2 Symbols used



= Important notes



= Danger notes




= Safety notes

### 1.3 Legal basis

This equipment complies

- with EMC guideline 89/336/EC and 92/31/EC
- low-voltage guideline 73/23/EC

### 1.4 Overall view

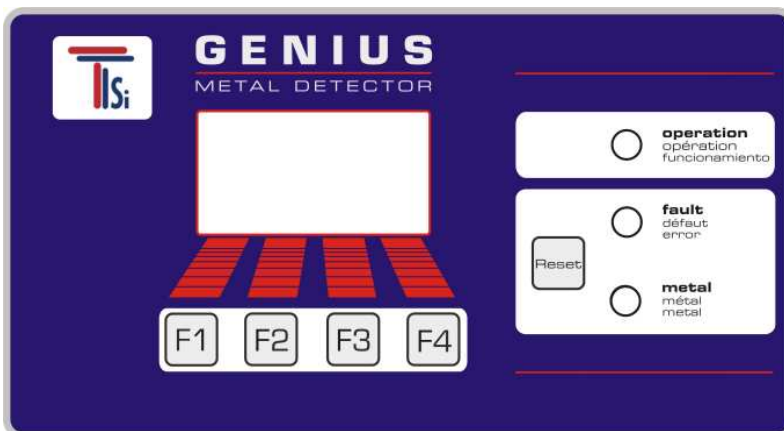


## 2 Technical data

### 2.1 Performance data

<b>Type:</b>	Control Unit GENIUS
<b>Housing:</b>	Sheet metal, painted, pure-orange (RAL 2004) or FDA white, food grade (RAL 9010) or stainless steel, glass lead blasted or polished.
<b>Dimensions:</b>	see page 6
<b>Weight:</b>	6 kg
<b>Connecting cable:</b>	(to the detection coil) standard up to 5m (up to 50 m max.)
<b>Mains cable:</b>	1,8 m with plug
<b>Ambient temperature:</b>	on request
<b>Type of protection:</b>	IP 65
<b>Operating voltage:</b>	230V / 115V (+10%, -15%), selectable, 50Hz / 60Hz
<b>Current input:</b>	approx. 120 mA
<b>Fuse:</b>	630 mA, slow-blowing
<b>Switching inputs:</b>	2 switching inputs for initiators 1 switching input for light barrier 1 switching input RESET 8 switching inputs for special functions and options
<b>Switching outputs:</b>	1 switching output 24V DC, 200mA for metal detection 2 relay switching outputs for metal detection 1 relay switching output error message
<b>Interface:</b>	Serial interface RS232 or. RS485 (option)
<b>Operation:</b>	Graphic display with 4-key operation
<b>Conveying speed:</b>	depends on type and size of the detection coil used
<b>Can be combined:</b>	Detection coils of GLS, GLS-R, DLS and ELS

**Subject to changes due to technical innovation!**


## 2.2 Dimensions

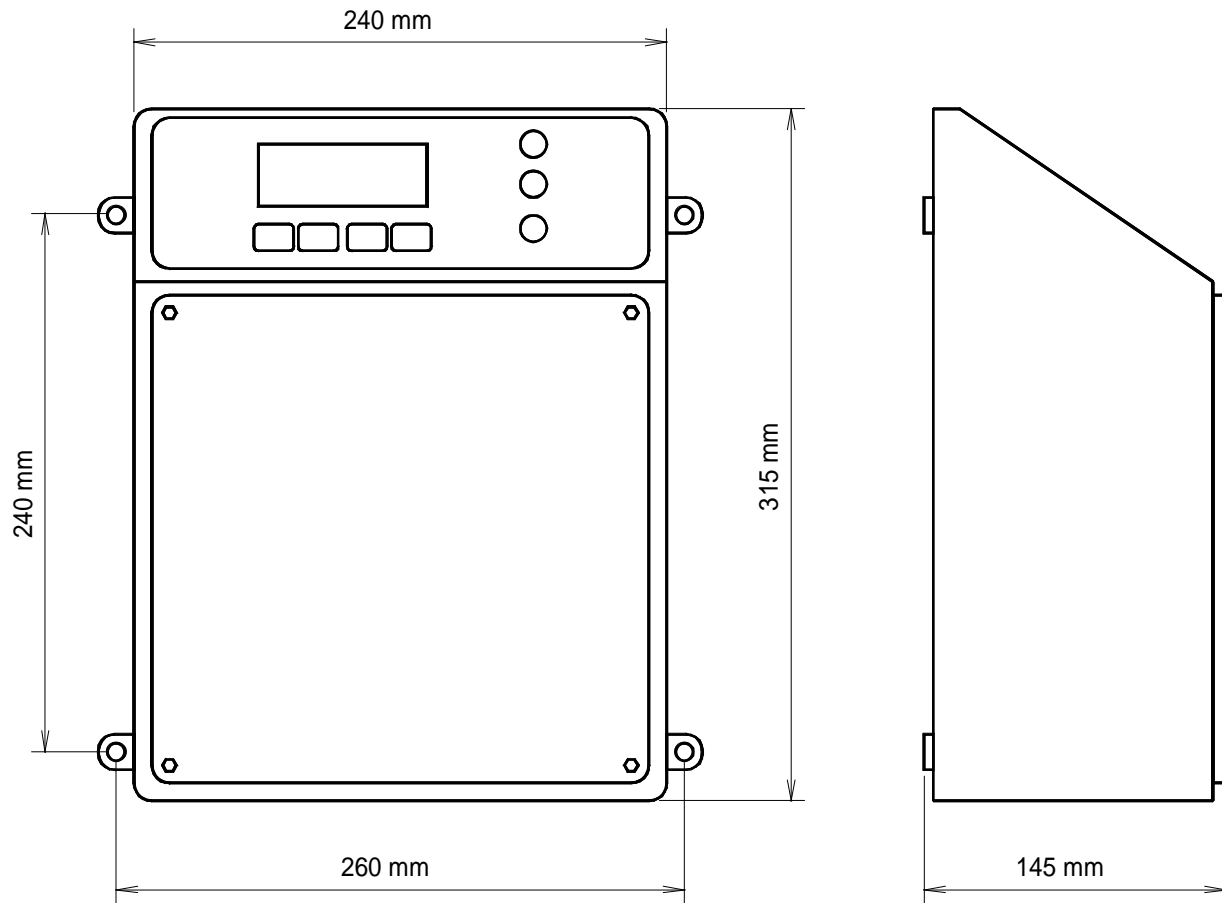



### 3 Design and method of operation

#### 3.1 Functional principle

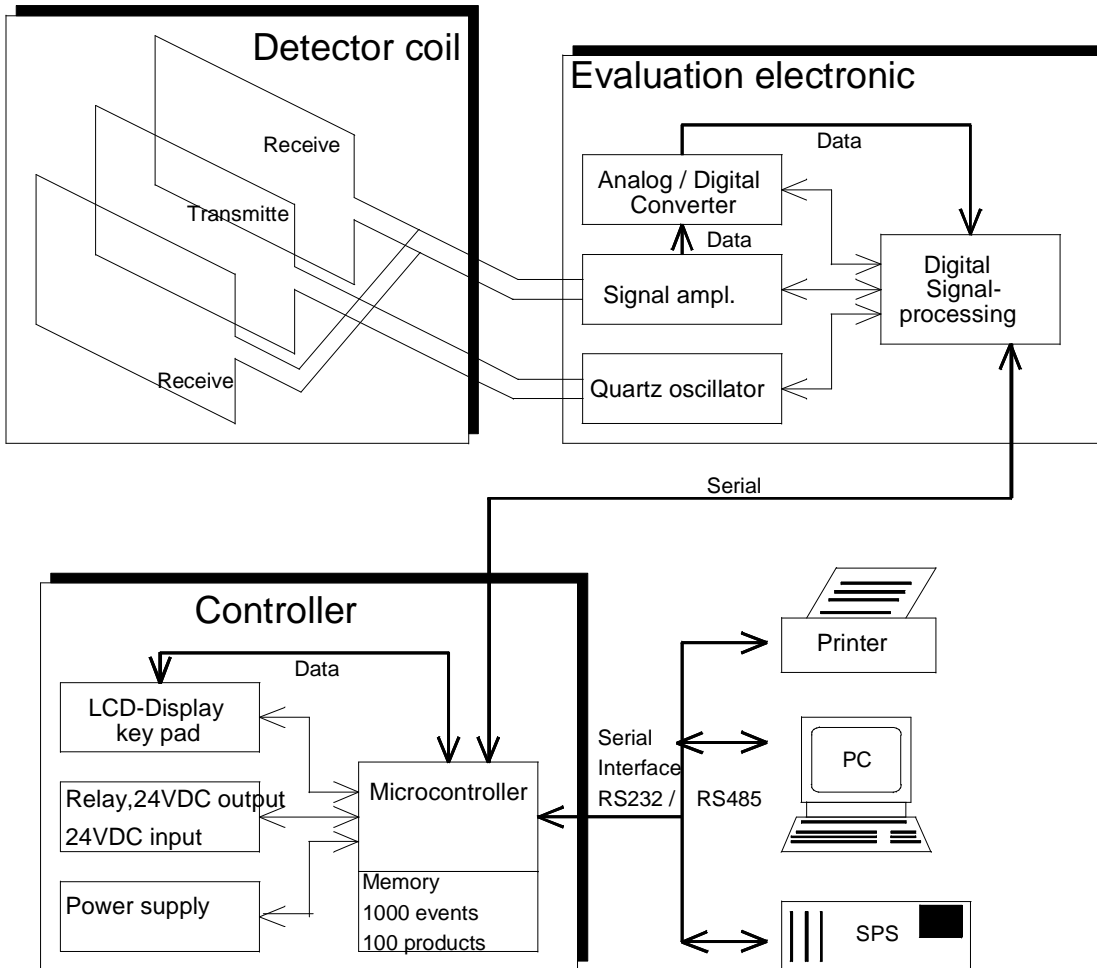


A metal impurity within the aperture of the detector causes an unbalanced condition of the high frequency electromagnetic field, which is recognized by the evaluation electronics. The product to be inspected can also cause an unbalanced condition. The evaluation electronics is able to neutralize and store this effect and detect despite of that metal impurities within that product. The controller acts as the central processing unit and controls the evaluation electronics, display unit, serial interface for external control units (SPS, PC) and printers. The PC can run also the Data Management System INSIGHT GENIUS.

### 3.2 Functional and control elements


#### 3.2.1 GENIUS - Housing

Display and key pad:

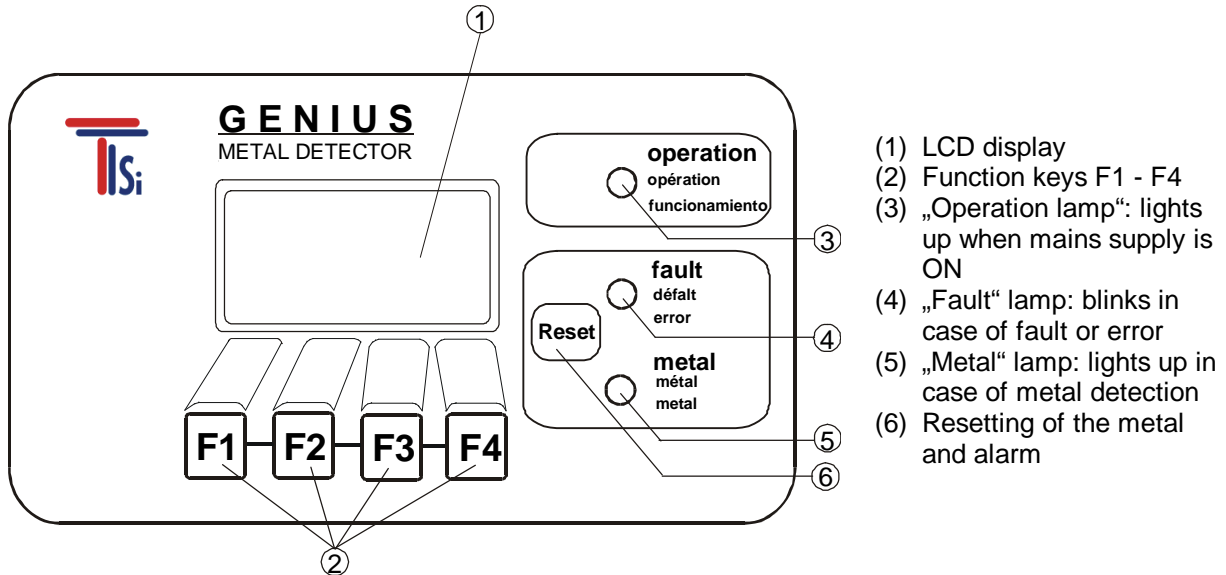


- (1) LCD display
- (2) Function keys F1 - F4
- (3) „Operation lamp“: lights up when mains supply is ON
- (4) „Fault“ lamp: blinks in case of fault or error
- (5) „Metal“ lamp: lights up in case of metal detection
- (6) Resetting of the metal and alarm

At the bottom of the housing:

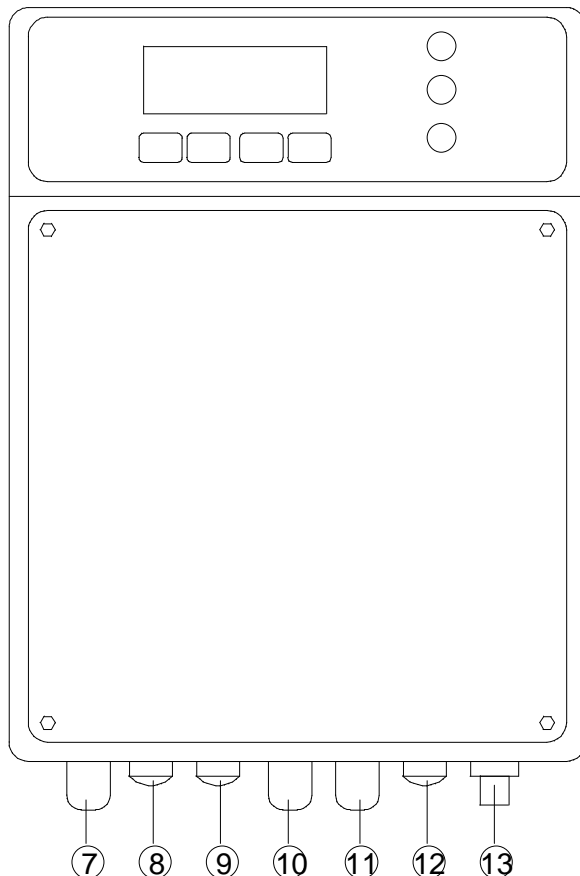

- (7) Cable gland for the mains cable
- (8) Cable gland for free use
- (9) Cable gland for free use
- (10) „Receiver“ cable gland for connecting the detector coil
- (11) „Transmitter“ cable gland for connecting the detector coil
- (12) Cable gland for free use
- (13) Cable gland for free use (or connection of the serial interface (option))

3.2.2 GENIUS - Controller board STE

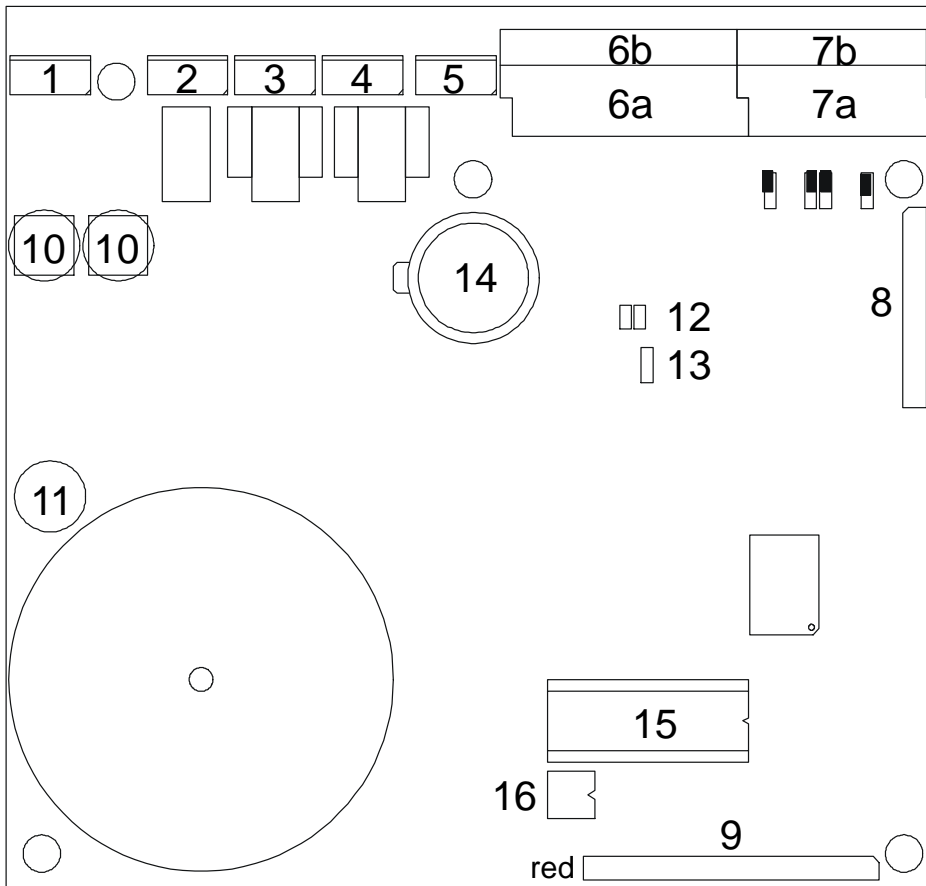


<p><b>Connectors:</b></p>	<p>(1) „Mains“: Mains supply                  (2) „Fault“: Potential-free change-over contact                  (3) „Metal 1“: Potential-free change-over contact                  (4) „Metal 2“: Potential-free change-over contact                  (5) „24V Output“: 24V switching output                  (6) a) 24 Inputs and outputs.                  b) Connection detection coil/sensor electr.                  (7) a) 24 Inputs                  b) Serial interface RS485/RS232                  (8) Ribbon cable connector for control panel                  (9) Ribbon cable connector Option</p>
<p><b>Elements connected to mains voltage:</b></p>	<p>( 1) „Mains“ connector                  (10) Mains fuse                  (11) Mains voltage selector switch</p>
<p><b>Elements connected to external voltage:</b></p>	<p>(2) „Fault“ connector                  (3) „Metal“ connector                  (4) „Metal“ connector</p>
<p><b>Memory devices:</b></p>	<p>(14) Data battery for Logbook                  (15) Program memory                  (16) Device and product data memory</p>

### 3. Design and method of operation

---

--	--

**3.2.3 GENIUS - Evaluation electronics board AWE**

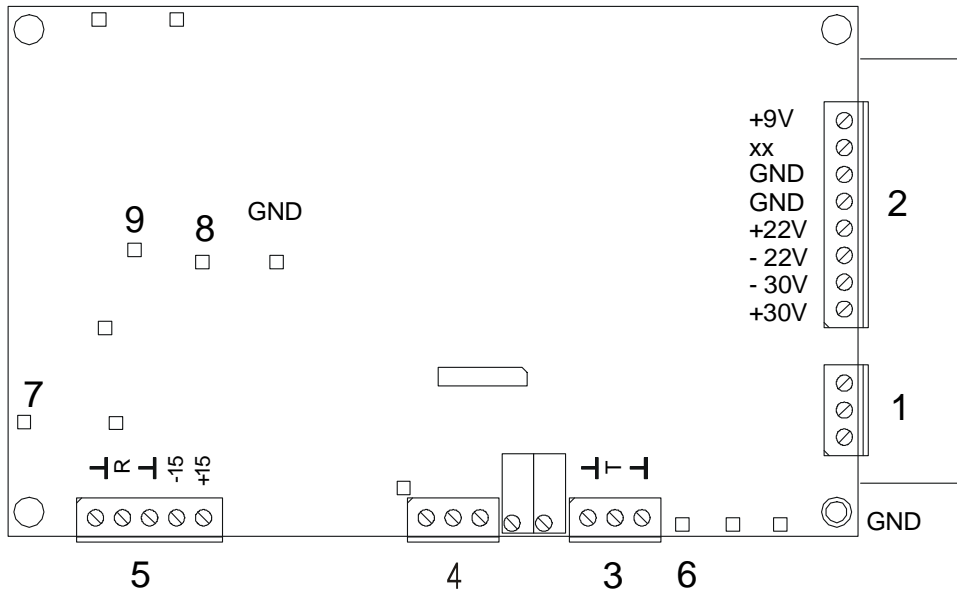

<b>Connectors:</b>	(1) STE RS485: (2) Power Supply: (3) Transmitter: (4) Cable Check: (5) Receiver:	Interface RS485 to the controller board Power supply from the controller board Output signal to the detector coil Control signal to the detector coil Input signal from the receiver
<b>Test points:</b>	GND (6) Transmitter  (7) Receiver (8) Metal signal (9) Metal signal	Common ground for all signals Sine wave signal (45..50Vss) feeding the transmitter coil  Sine wave signal from the receiver coils branch S branch A

## 4 Safety

### 4.1 Use to the intended purpose

The equipment is intended to be used in the following fields of application only in combination with a corresponding detector coil: SF-DF, free-fall applications, and conveyor belt applications.



### 4.2 Notification of risk

People with cardiac pacemaker should not stay in the area of the detection coil permanently.



### 4.3 Risks in case of non-observance of the safety notes

There are no known risks or side effects emanating from the electronic unit, if the equipment is not used to the intended purpose.



### 4.4 Safety notes for the operator

If potentially explosive materials are examined, the pertinent regulations have to be observed.



### 4.5 Safety notes for operation and maintenance

During operation the covers for the electronic unit and/or electronic controllers must always be kept closed.  
For maintenance work at the electric/electronic unit or at the pneumatic unit the power supply and external circuits and compressed air must always be disconnected.  
Maintenance work may only be performed by qualified personnel.



### 4.6 Notes on residual risk

Disconnect external control circuits.



### 4.7 Consequences of unauthorized modification

In case of unauthorized modification or repair work all the declarations and guarantees given by the manufacturer will become void.



### 4.8 Inadmissible operation

Operation out of the specifications given in the technical data.  
Operation under high mechanical static and dynamic loads (e.g. heavy system parts or strong vibrations).



## 5 Commissioning


### 5.1 Mechanical Mounting

- Ensure stable and non-vibrating installation!
- Do not install the detection coil and the electronic unit in the vicinity of interference fields (large electric motors and frequency converters!) The distance depends on the power consumption of the motor or of the frequency converter (value for orientation: 5 m).
- Never install the electronic unit in other switchgear cabinets, because this may lead to interference effects.(e.g. from contactor controls)!
- Cable lengths may only be modified after consultation with „TecTronix Systems“. Use only original cables. Lay the connecting cable in fixed installation apart from other cables (e.g. fix it with nailing clips or lay it in a cable duct).
- If several metal detector systems are used, the distance of the detection coils must not be less than 2m, if these coils stand side by side. If the coils are arranged opposite to each other, the distance must not be less than 10 m. These values apply to large systems; for smaller systems the distances may be reduced to 50 cm. If, for reasons of space, these distances cannot be observed, please contact TecTronix Systems service!

### 5.2 Connection of the equipment




In order to meet CSP, UL and CE standards all cable outside of the housing have to be shielded. The shields must be grounded immediately after the cable gland.

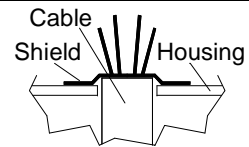


The terminals „Mains“ and „Evaluation Unit“ are already factory reconnected. According to the delivered option several connectors may be used.

#### 5.2.1 Connector assignments on the controller board

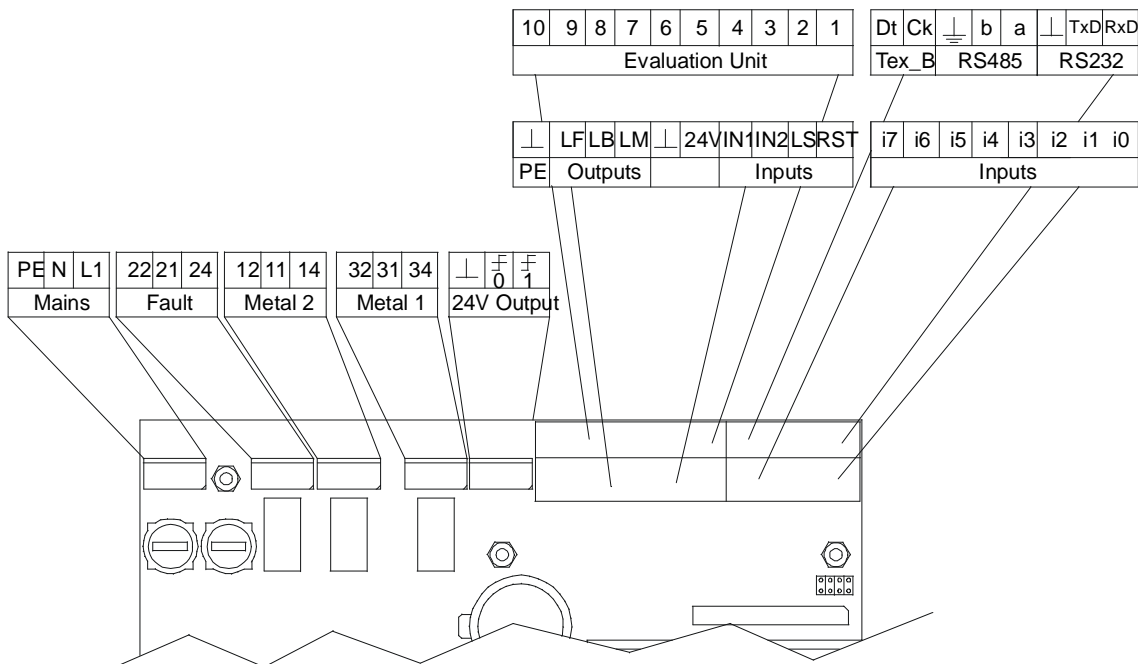

5.2.2 Electrical connection

Signal	Connection	Function
„Fault“	Potential-free relay contact	Normal operation: Contact 21 and 24 closed In case of a fault: Contact 21 and 22 closed
“Metal 1“	Potential-free relay contact	Normal operation: Contact 31 and 32 closed In case of metal detection: Contact 31 and 34 closed <u>Special functions at mode Rapid (for Alarm devices) and CONSENSE-D (Belt conv. Start/Stop)</u>
„Metal 2“	Potential-free relay contact	Normal operation: Contact 11 and 12 closed In case of metal detection: Contact 11 and 14 closed
„24V Output“	24VDC switching output	<u>Low-activ = yes (see 6.4.2.6):</u> Normal operation: 0V DC to $\perp$ In case of metal detection: 24V DC to $\perp$ <u>Low-activ = no (see 6.4.2.6):</u> Normal operation: 24V DC to $\perp$ In case of metal detection: 0V DC to $\perp$ Special functions for bidirectional pusher and for diverter controller (Option)
„ $\perp$ “	Ground (GND)	Power supply for proximity switches and light barriers Ground reference for the inputs IN1, IN2, LS and RST
„Outputs“	24VDC switching outputs wired to +24VDC	LM: Metal lamp lights on metal detection LB: Operation lamp lights on test request (see also chapter 7.2) LF: Fault lamp lights in case of errors
„24V“	24VDC Power supply	Power supply for light barriers and proximity switches Signal reference for outputs LF, LB and LM Signal reference for inputs i0 .. i7
„Inputs“	24V switching inputs to $\perp$  wired to +24VDC	IN1 1. Proximity switch input for distance measurement / diverter flap (NPN) IN2 2. Proximity switch input for distance measurement / diverter flap (NPN) LS Start Autotest (see chapter 6.4.2.7) RST External Reset input  i0 identically to IN1 but PNP i1 identically to IN2 but PNP i2 Pressure monitor i5 identically to LS but PNP i7 Free fall mode (Rapid XXXX): connection of test push button to activate the diverter unit. i3,i4,i6, for special applications.

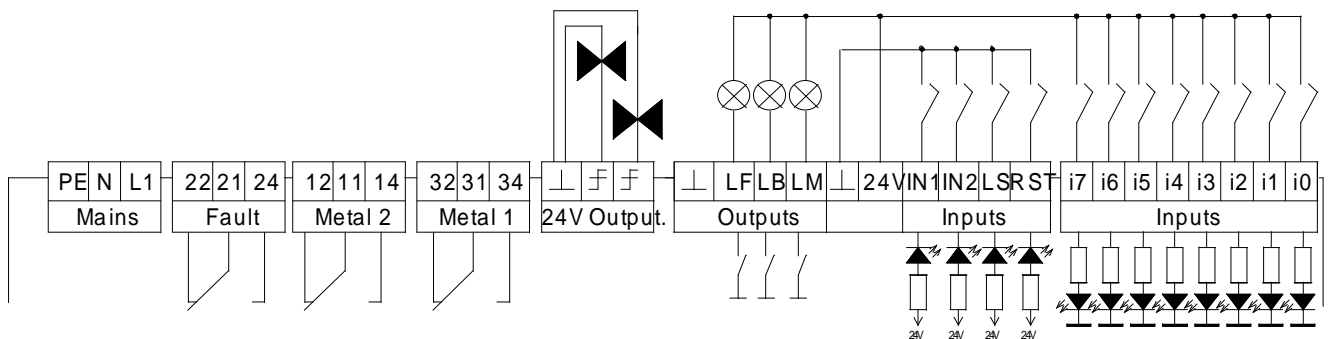



### 5.2.3 Electrical Performance



<b>Potential-free relay contact</b>	250VAC/ 3A 120VDC/ 3A
<b>24VDC outputs</b>	Max current load: 300mA
<b>Inputs: In1 / In2 / LS / RST</b>	Connection of make contacts against $\perp$ , resp. NPN outputs
<b>Inputs: i0 .. i7</b>	Connection of make contacts against +24 V, resp. PNP outputs

### 5.2.4 Electrical Connection of the equipment




Only qualified persons are authorized for the following procedure!  
Before opening the housing make sure that no mains voltage or any external voltage is connected!

1. After unloosing 4 screws fold the cover downward.
2. Do the wiring according to your needs.
3. Check the mains voltage selector switch for correct position.
4. Connect mains power supply.
- 4.1. The power cord and skintop gland may not be removed - it is a essential part of the EMC-concept. If the mains plug cannot be used a conduit box should be used.

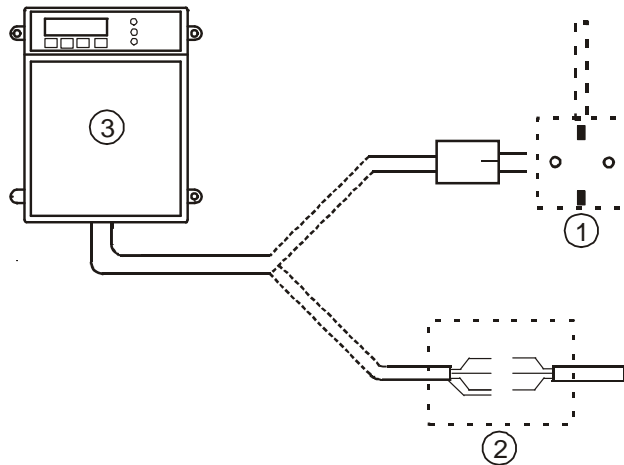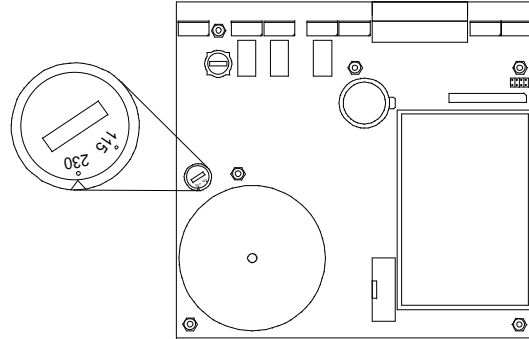


- ① Mains supply by using the outlet
- ② Mains supply using alternatively a mains connection box
- ③ Controller board GENIUS

#### 4.2. If necessary, connect plug ST1 "Mains"

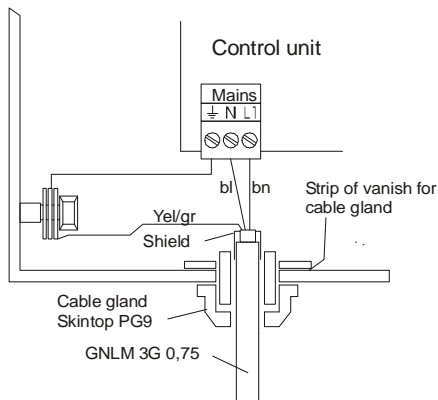

#### Mains cable

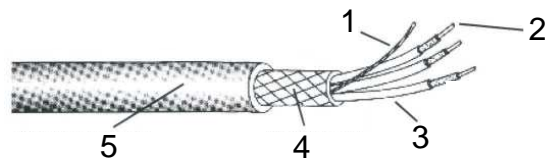


Cable	Plug / connection cable
■ Shield	PE
■ Conductor L (brown, bn)	L
■ Conductor N (blue, bl)	N
■ Conductor PE (yellow, yel / green, gr)	PE

①	Shield
②	Conductor
③	PVC - insulation
④	Shield
⑤	Sheath

5. After 5 sec the unit is ready for work

## 6. Operation / Menu structure

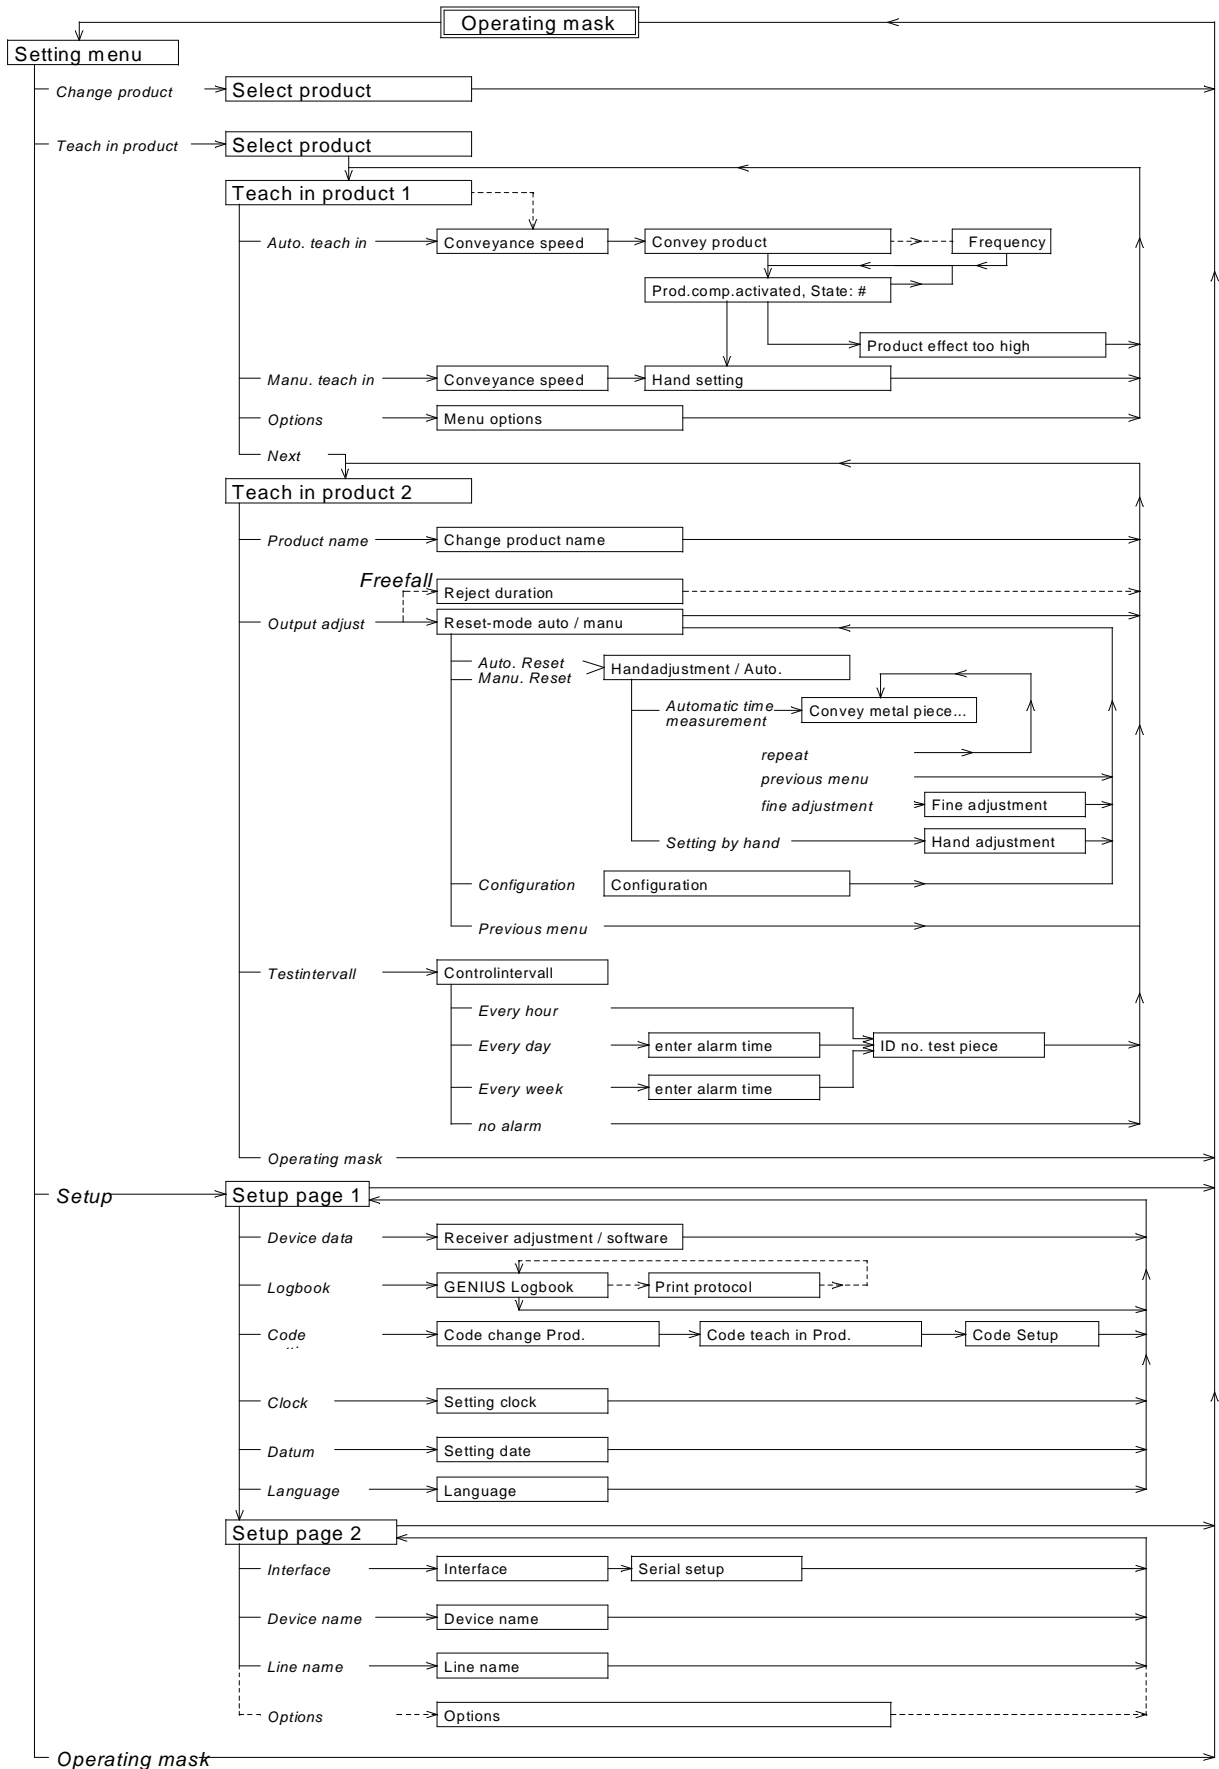

## 6 Operation / Menu structure

This section starts with a short form instruction for the most important settings including cross references for the comprehensive instructions.

Afterward all menus are described. To ease the handling the menu structure can be fold out.


### 6.1 Quick start

#### 6.1.1 Setting of the most important parameters

Language (if necessary):

1. The operation mask appears after power on (see 6.2).
2. Press F1 „Adjustments“ followed by F3 „Setup“ .
3. Press five times key ↓ until „Language“ is marked and press „O.K.“ .
4. Select language and confirm with „O.K.“ (see 6.3.6)
5. Return by pressing key „END“ .


#### 6.1.2 Teach-in procedure for new product

1. Press F1 „Adjustments“ followed by F2 „Product teach-in“.
2. If a list of preprogrammed products is displayed press key ↓ until „\*\*NEW\*\*“ appears and confirm with „O.K.“ (see 6.4.1)
3. Set the conveying speed of the product or speed of belt conveyor and confirm with „O.K.“.
4. Follow the instruction on the display. Pay also attention to the -window described in chapter 6.4.2.2!
5. Press F4 (“continue”), then F2 (“output adjust”) in menu „Product teach-in“.
6. Select F1 or F2 for automatic or manual Reset of the metal outputs (see 6.4.2.6).
7. Press F1 „Manual Adjustment“ and set the requested „Delay time“ after metal detection and activation of the outputs.
8. Confirm the inputs by pressing key „O.K.“, then press F4 to get to the previous menu.
9. To get to the „Operating mask“ press F4.
10. The GENIUS is now adapted to the surrounded conditions and the product.
11. Check the proper operation by putting a metal particle through the detector and watch if it works correctly.




### 6.3 Set up menu

The Set up menu allows to set all product independent parameters, i.e. conveying speed, access codes, clock, language...

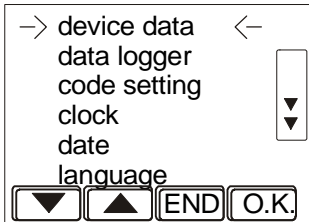


Setup page 1: the selection of „Setup“ in adjustment menu gets to the first page of the adjustment menu. The requested parameter is selected by ▼ and ▲ followed by „O.K.“. Return to operating mask press key „END“.

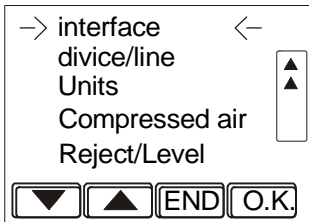

Setup page 2: the second page is activated if the page cursor is on the bottom line and key ▼ is pressed. Select parameter as described above. The function requested is selected with the ▼ ▲ keys and „O.K.“. The functions „Compressed air“ and „Reject/Level“ are active if option was factory set. (see 6.3.10, 6.3.11, 6.3.12, 6.3.13 and 6.3.14).


#### 6.3.1 Check of detector adjustment and software version

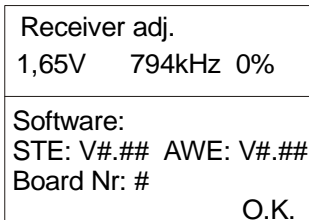

Receiver adjustm./software: Select „device parameters“ in Setup menu page 1. No settings are possible in this menu. Displayed informations:

- Adjustm:** Receiver voltage (Vpp)  
Frequency (kHz)  
Frequency deviation in %
- Software:** STE: Software version of controller  
AWE: Software version of evaluation electr.
- Board Nr.:** printed circuit board no. of the controller.

Return to Setup page 1 press „O.K.“

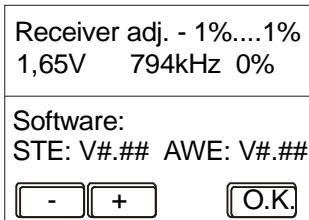


To change the frequency deviation within the limits press the O.K. for more than 2 seconds.

It will be necessary if two detectors are close together so that they will affect each other.

The keys „-“ and „+“ will change the frequency stepwise. O.K. gets to Setup mode page 1

### 6.3.2 Event recording by the GENIUS Log book

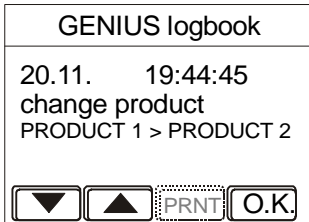

GENIUS Log book: Select „Log book“ in Setup menu page 1. The last 1000 events are stored in a database and can be displayed. The latest event is displayed first.

Displayed information:

Date and time of the event


Kind of event:

- **Metal:** Intensity, number of metal detection since commissioning
- **Fault:** Number of faults since commissioning, Type of error
- **Message:** Power on /off
- **Product change**  
old product → new product.
- **Batch change**
- **Product parameter changed**

The keys ▼ and ▲ allow scrolling the event memory.

If the option „serial interface“ has been set, the key „PRNT“ will print out the logbook. (See operational manual Control Unit GENIUS option serial interface)

### 6.3.3 Activation of Access Codes

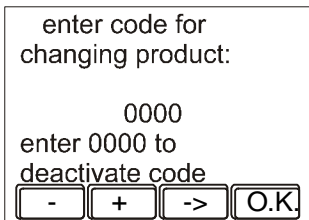

Code Prod. Change / Code Prod. teach-in / Code Setup: This menu is selected by choosing „Code“ in Setup menu page 1.

This menu allows to enter the access codes for „Change product“, „Teach-in Product“ and/or „Setup“.

The - and + enter the figures 0...9, the key → selects the digit.


The input is completed by pressing „O.K.“

The input masks for the 3 different access codes are recalled one after

the other automatically before getting the Setup page 1 mask.

	If all of the access codes are in use, the following hierarchy is given			
		Setup	Product teach-in	Product change
	Setup code:	yes	yes	yes
	Product teach-in code:	no	yes	yes
	Product change code:	no	no	yes

### 6.3.4 Time setting

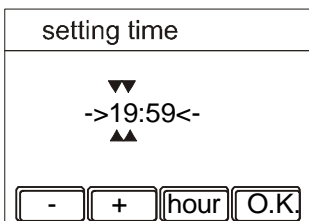

Setting of time: Select in Setup menu page 1 „time“.

With F3 Hour or Minute is selectable. The keys + / - are used to set the time.

Complete the input with „O.K.“

### 6.3.5 Date setting

setting date
▼▼ ->mo,20.11.2000<- ▲▲
- + day O.K.

Setting of Date: Select in Setup menu page 1 „date“.  
With F3 Day, Month or Year is selectable. The keys +/- are used to set the date.  
Complete the input with „O.K.“  
Pressing „O.K.“ returns to Setup menu page 1.

### 6.3.6 Language setting


deutsch	italiano
english	svenska
francais	dansk
nederlands	
▼▲	ESC O.K.

Language: The language is set by selecting in menu Setup page 1 „Sprache“. Use ▼ and ▲ to choose one of the 7 available languages. „O.K.“ completes the selection and returns to Setup menu page 1 displayed already in the chosen language.  
„ESC“ returns to Setup menu page 1 without changing the preset language.

Available languages (included in the standard software package):

<b>deutsch</b>	German
<b>english</b>	English
<b>francais</b>	French
<b>nederlands</b>	Dutch
<b>italiano</b>	Italian
<b>svenska</b>	Swedish
<b>dansk</b>	Danish

### 6.3.7 Serial Interface configuration (option)

	This menu is only activated if Genius is equipped with a serial interface!
---	--

interface
none
printer online
printer portable
PC/SPS
▼▲
ESC O.K.

Interface: See operational manual „Control Unit GENIUS serial interface“.

### 6.3.8 Setting of Device and Line name

enter divece name:
▼ DETECTOR 1 ▲
▼▲ = 012...ABC...
▼▲ → O.K.

enter line name:
▼ LINIE 1 ▲
▼▲ = 012...ABC...
▼▲ → O.K.

Device name / Line name: See op. manual „Control Unit GENIUS serial interface“.  
The input names will only appear on the print outs of a connected event printer.




### 6.3.9 Setting of the unit for conveying speed

Units	
Speed is shown in	
Meters per Second	
[SEL]	[ESC] [O.K.]

Measuring unit Speed: this menu is selected by selecting „units“ In Setup menu page 2.  
 This menu allows to choose either **Meters per Second** or **Meters per Minute**.  
 The units are selected with the key „SEL“ and the input is confirmed by „O.K.“ which also skips to Setup mode page 2.  
 Using the „ESC“ key will also return to Setup mode page 2 without changing the unit.

### 6.3.10 Adjustment of the Air pressure monitor (option)

	<p>This menu is activated if Genius is equipped with an air pressure indicator!                  During reject the air pressure can fall under the adjusted limits of the pressure indicator. The air pressure is not monitored during and a certain time after reject (recovery time) as it can be out of limits during this time.</p>
---	---

Air pressure monitor	
Recovery time	
0 ms	
Set 0 ms to disable.	
[ - ]	[ + ] [ESC] [O.K.]

Recovery time: To get to the menu select „Compressed air“ in Setup menu page 2.  
 The keys – and + set the air pressure recovery time in steps of 5 milliseconds.  
 The pressure monitor is disabled when set to 0 ms.  
 „O.K.“ confirms the setting and gets back to Setup menu page 2.  
 „ESC“ returns also to Setup menu page 2 without any change.


### 6.3.11 Conveying speed setting with distance measurement (option belt conveyor)

If the system is delivered with the option “path measurement”, then two proximity switches have to be connected to the corresponding input terminals of the control unit (see also 5.2)


conveyance speed	
0.03 .. . 0.40 m/s	
v: 0.30 m/s	
100 mm/clock	
[ - ]	[ + ] [O.K.]





Conveyance speed:  
 Select „Conveyance speed “ in Setup menu page 2.  
 The pulse frequency of proximity switches triggered by a belt roller is used to calculate the conveying speed.  
 The corresponding distance of the belt in mm/pulse (clk) of the proximity has to be set.  
 The calculated speed **v** is displayed in m/s.  
**This parameter is already factory preset on delivery and should not be changed!**  
 „O.K.“ returns to Setup menu page 2.

This option does not use the menu Conveyance speed as described in 6.4.2.1

	<p><b>Attention!</b>                  The optimum performance is only guaranteed, if the set value for conveying speed corresponds with the real product speed. Deviations should be less than 20%!</p>
---	---


### 6.3.12 Adjustment of Reject and Level monitor (option belt conveyor)


 


 This menu is only activated if a light barrier is installed at the reject box!  
 During reject the product must have passed the light barrier after 3 seconds. If not, an alarm message is generated „Not rejected“.  
 If the light barrier is activated by a product for more than 5 seconds, the alarm message „Reject box full“ is displayed.

Reject Monitor	
-> Reject :	nein
Level :	ja
   	

Reject/Level monitoring: This menu is selected in Setup „Reject/Level“ on page 2.  
 The monitoring mode can be selected with the key „SEL“.  
 With keys ▼ and ▲ the mode can be activated/disabled.  
 O.K. confirms the selection and gets back to the Setup menu page 2.

### 6.3.13 Adjustment of the Diverter position monitor (option pipe conveyor)


 This menu is only activated if the diverter is equipped with the appropriate sensors!  
 Two different times have to be set, as the forward and the reverse time is different.

Diverter monitor	
Forward:	0ms
Reverse:	: 0ms
To disable set to 0 ms	
   	

Adjustment/ Enabling of the Diverter Monitor: This is selected in Setup menu page 2 after selecting „Diverter Monitor“  
 Two different times have to be set, which are selected with „SEL“ and set with + and –.  
**Forward:** time of the diverter flap to get from the normal to reject position.  
**Reverse:** time to get back from reject to normal position.  
 The diverter monitor is enabled if the two values are set > 0 ms.  
 The diverter monitor is disabled if just one value is set to 0 ms.  
 O.K. gets back to the Setup menu page 2

Settable time range: 0ms....step 5ms...5000ms.

The monitor generates the alarm message „Diverter position“ if the diverter is not in normal position during normal operation, or moves not or to slowly in case of metal detection.


 If the times were set to short, the monitor will display „Diverter position“.  
 To get to the menu to adjust the times press RESET button and then F1 (red lamp is still blinking).  
 After resetting (or disabling) the diverter monitor the alarm signal (red lamp) have to be reset.

### 6.3.14 Adjustment of the Diverter Controller (option pipe conveyor)



This menu is activated only if Genius is used in combination with a special diverter unit for textile fibers (Quick flap)

The magnetic valve which is triggered for return motion is connected to terminals „24V Outp.“ pin 1.(see also 5.2.1).

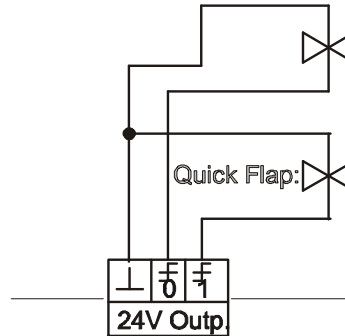

Quip flap
Return time: 0.00 s
To disable enter 0 ms
<input type="button" value="-"/> <input type="button" value="+"/> <input type="button" value="ESC"/> <input type="button" value="O.K."/>

#### Adjustment/ Enabling of the diverter controller:

This menu is selected in Setup menu page 2 „Quip flap  
 The time duration can be set to control a second magnetic valve which returns the diverter to normal operation position.  
 The setting is completed by O.K. and returns to Setup page 2.  
 „ESC“ returns without changing the setting to Setup page 2.

Adjustment range for the return time: 0ms...step 50ms ...1.00s  
 The setting of 0 ms disables the function.

## 6.4 Product teach-in menu

- Many products to be inspected have the property of electrical conductivity. Metal detectors would detect this effect as metal. Therefore this „product effect“ has to be suppressed by a product teach-in procedure for each different product.
- The electric conductivity of products to be inspected are usually indicated as „product angle“ (=product effect). This angle (which is an important internal parameter of the signal evaluation) has to be set that way that the effect of the product is eliminated or at least minimum.
- The Genius displays this product angle from 0..step 0.1...180°. Between 180° and 0° the value is displayed as „---“. The signal evaluation then is not using the product angle and provides maximum sensitivity to all kinds of metals for dry products or products without product effect.
- The outputs can be set independently and differently for each product. These settings are: **Delay time** between detection and output activation, **Duration time** of output activation, **Reset mode**.
- The product memory can handle up to 200 different products.
- There are also two preset product memories:

**Product A** Sensitivity (100%), and phase comp. (---) are preset and not changeable. This parameters represent the maximum adjustable sensitivity. All further parameters are adjustable.

**Product B** The angle of phase compensation is fixed to 90°. Th is adjustment provides maximum noise suppression of the surrounding (vibrations and mechanical shocks) but very good sensitivity for metals (esp. stainless steel). All further parameters are adjustable.

### 6.4.1 Selection of a product memory



Select product: Selected in „Adjustment“ menu it displays the list of already preprogrammed products.


The required product memory is selected by ▼ and ▲ confirmed by „O.K.“

To add a new product to the memory, select „\*\*NEW\*\*“.

The memory no. 0 „Standard“ can not be overwritten and selected for new product.

„ESC“ returns to the operating mask, already set inputs are ignored.

### 6.4.2 Product parameter setting

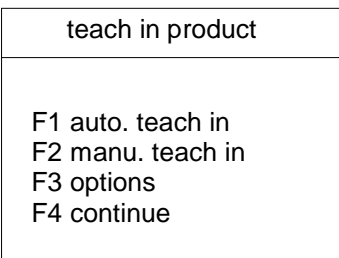

Teach in product 1: After the input of a product name the following functions can be selected by using F1 to F4:

If in menu „Select Product“ a new product memory was selected, the „Automatic teach-in“ mode is carried out first.

„**F1 Auto. Teach in**“: Follow the instructions on the display which guides through the teach-in procedure. Product parameters are found out and set automatically.

„**F2 Manu. Teach in**“: Product parameters can be adjusted individually by hand.

„**F3 Options**“: Allows to optimize metal detection in case of small product effects or step by step conveying operation. This menu is not activated in Free fall or SF/DF mode.

„F4 continue“: gets to next menu (see next page)

teach in product
F1 product name F2 output adjust F3 testintervall F4 operating mask

Teach in product 2:

„F1 Product name“: A 10 character name can be entered.

„F2 Outputs“: The ON/OFF state of the outputs can be programmed (Eject duration, delay time, reset automatic /manual)

„F3 Testintervall“: A performance validation and scheduled testing can be activated.

„F4 Operating mask“: Returns to operating mask.

6.4.2.1 Conveying speed


One of the following operating modes is factory preset :

**Free fall:** Metal separators of the series Rapid 4000, 5000, 6000  
The conveying speed is preset to 3 m/s and cannot be changed.

**Belt conveyor appl. with timer:** Belt conveyors working at constant speed  
The conveying speed is set during the teach in procedure of a product.

**Belt conveyor appl. with path measurement:** Belt conveyors working with variable speed (option):  
The current conveying speed is measured by proximity switches (see 6.3.11).  
Therefore the following menu will not appear.

Before each teach-in procedure (manually or automatic) the menu „Belt conveyor time measurement“ and requires to set the conveying speed.

	Attention!
	The metal detector works at optimum sensitivity if set speed and real conveying speed are identical! In order to emphasize the importance of this parameter the controller requires the input of the conveying speed.


Conveying speed
Optimum:   ##,## m/s
Range: ##.## m/s ... ##.## m/s
<input type="button" value="-"/> <input type="button" value="+"/> <input type="button" value="O.K."/>

Conveying speed:

Use + / - to adjust the current speed of the product (or belt speed) in m/s

The displayed range shows the limits, which the controller is able to operate properly at highest sensitivity. This limits are device parameters and depends on the geometrical size of the detector head.

Pressing „O.K.“ gets to automatic or manual teach in mode.

	The shown limits of the conveying speed range are absolute values! <b>If the conveying speed is set out of this range no detection will be performed!</b>
---	--

6.4.2.2 Automatic product teach-in

teach in product
Please convey product several times through the detector, then push F4.
O.K.

Convey product: After choosing „Auto. learn“ in menu „Teach-in product“ (when „New product“ was selected before, this menu is skipped) and after a short „Please wait“ message the system requires to convey a product.



Pay attention to the instructions below! Confirming the action by pressing the key „O.K.“ normally „Product compensation status 2“ is displayed. With the multi frequency version (option) „Frequency change“ will be displayed. The lower frequency will then be selected.

teach in product
Product compensation activated. Convey product again for several times, then push F4.
Status: #                      O.K.

Prod. Comp. active, Status #: This step sets the product compensation parameters, which are „phase angle“ and thresholds for the metal alarm. Confirm after several runs by pushing „O.K.“ This procedure will be required several times depending on the strength of product effect. The numbers of steps is displayed as „status“. If the teach in procedure has been successful then the menu „Manual parameter setting „ appears, which allows to manually adjust the automatic set parameters (see also below).

teach in product
Very big Effect! Please teach in the product again.
O.K.

Product effect extremely high: This message is displayed if the system was not able compensate the product effect. After pushing „O.K.“ the main menu for „Product teach-in“ is activated again in order to repeat the automatic teach-in procedure. This is caused most likely during the teach-in procedure by heavy interference or disturbances.

Possible reasons for unsuccessful teach-in procedure:


**Reason:**

**Remedy:**

Vibration of the detector coil during teach-in procedure	Repeat teach-in procedure
Metallic contaminants in product	Ensure that metal-free product is used for teach-in procedure and repeat.
Several trials without success: Product effect can not be compensated	Ask TecTronix Systems service for help. Send test sample of the product.

	<p>To get optimum product compensation, which results in optimum sensitivity, pay attention to the following:</p> <ul style="list-style-type: none"> <li>The real <b>conveying speed</b> must correspond with the rate which was set at Setup (deviation max. <math>\pm 20\%</math>).</li> <li>During product teach-in procedure the products must be conveyed always in the <b>same direction</b>.</li> <li>For products <b>conveyed piece by piece</b> each step must be repeated minimum <b>2 times</b>. Better results are achieved with several repetitions to average product straggling. For products <b>conveyed continuously</b> wait, as a thumb rule, that the product has passed 5 x of the detector length before confirming and initializing the next step.</li> <li><b>Avoid vibrations</b> during teach- in procedure. Vibrations would considerably affect the results!</li> </ul>
--	---

6.4.2.3 Manual setting of product parameters

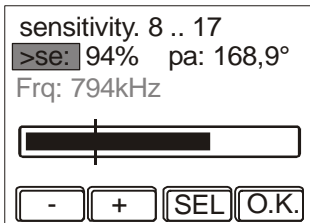

Manual parameter setting: select „Man. learn“ in main menu „Product teach-in“ for manual setting of the parameters for product effect compensation and sensitivity. The menu appears also after a successful teach in procedure. Key „SEL“ selects the parameter. The first line of the display shows the name of the selected parameter and its adjustable range. The keys ← / → are used to modify.

The bar graph with integrated trigger threshold displays the metal signal. Thus the effect of modifications can be seen immediately.

**Sensitivity (Sens):** The sensitivity can be selected between 1 ...100%. The trigger threshold is shifted on the display from left to right with descending order.


**Product phase angle (PA):** Adjustable from 0,0° to 180,0°. Between 0,0° and 180,0° „----“ is displayed. This means that product compensation is totally deactivated, which allows to run the evaluation unit at the highest possible sensitivity for all kinds of metals from the physical point of view.

Pressing „O.K.“ returns to main menu „Product teach-in“.

**Frequency (Frq) (option):** with the multi-frequency version the frequency can be selected.

It has to be considered: the higher the frequency the higher the product effect.

6.4.2.4 Options for product effect equalization

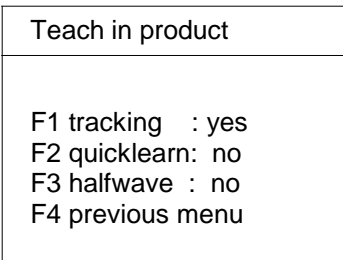

Menu Options: after selecting „Options“ in menu „Product teach in 1“ different signal evaluation modes can be selected by F1 to F3

**„F1 Tracking“:** *Slight drift* caused by the product variation is automatically compensated and also shown on the display.


**„F2 Quicklearn“:** *Considerable* changes of products (i.e. changing in consistency) up to 5°, which would cause metal alarms, are detected and automatically corrected after 2 detections (products). If there is enough space between detector and reject unit (three times product length incl. gap) no rejection is carried out only in case of metal detection.

**„F3 halfwave“:** Specially used for stop and go conveying systems

Drawback: Increased noise sensitivity.

**„F4 Previous menu“:** Get to mask „Product teach in 1“

6.4.2.5 Input / change of product name

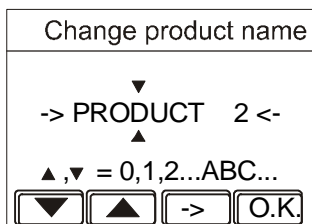


Change product name: After selecting a product memory in menu „Select product“ a 10 character name can be given. If **\*\*NEW\*\*** was selected in the product selection menu ,the name „PRODUKT #“ is used as a default text. ▼ and ▲ changes the marked character, key → selects the place of the character. „O.K.“ completes end returns to „teach in product 2“.

6.4.2.6 Setting of the outputs

This menu allows to set six parameters to determine the state of the outputs.

Parameter	Range	Description / remarks
<b>Reset mode:</b>	automatic / manual	Determines, if the outputs after activation by a metal signal are reset automatically or manually by an external signal or by push button.
<b>Delay</b>	Timer: 50 ms ... 3 min Distance: up to approx. 10 meters	Delay time resp. distance between metal detection and output activation
<b>Eject duration</b>	50 ms ... 2 min Distance: see above	Duration of output activation. Not used at reset mode „Manual“.
<b>Metal alarm in case of Fault</b>	Yes / No	Sets also the metal alarm output in case of faults (self monitoring )
<b>Low-Aktiv</b>	Yes / No	Set the high or low active status of the electronic output
<b>Flip-Flop</b> (only belt conv.)	Yes / No	Determines if the 24V outputs should switch by turns, to control a pusher rejecting to both sides. (High speed rejecting)
<b>Rel1-Man</b> (only pipe conv.)	Yes/ No	Determines if relay „Metal 1“ is reset manually (yes) or automatic (no)

 It is possible to program the outputs for each individual product. Normally the same setting is used at one installation. These parameters are set during teach-in procedure of the first product. When adding additional products the parameter of the first product are set as a default setting.

The GENIUS is factory preset to the following operating modes:

- Free fall (gravity feed):** For use with metal separators of the series Rapid 4000, 5000, 6000
- Belt conveyor with timer application:** For use with belt conveyor at constant speed.
- Belt conveyor with distance measurement:** For use with belt conveyor at variable speed

The **outputs** are programmable and can be set according to the application:

Output adjust	<u>Reset mode auto / man:</u> after selecting „output adjust“ in menu „teach in product 2“:
F1 auto. reset	„F1 Auto. Reset“: Selecting of menu for setting <i>delay time</i> and <i>reject duration time</i> .
F2 manual reset	„F2 Manual reset“: Selecting the menu for setting the <i>delay time</i> . This menu will not appear in operation mode " Free fall"
F3 configuration	„F3 Configuration“: Setting of the switching characteristic of outputs.
F4 previous menu	„F4 Previous menu“: returns to menu „teach in product 2“



Free-fall (Rapid device)

hand adjustment	
duration	x.xx s
-	+ O.K.

**Duration:** After selection of „output“ in menu „product teach-in“ the parameter „Duration“ can be set.  
 For metal separator applications this parameter is preset to automatic reset and delay time „0“.  
 The + / - keys allows to set the output duration time from 0.2, step 0.05 to 120 seconds.  
 „O.K.“ confirms the input and returns.

Timer setting for belt conveyor application

setting delay and duration:
F1 setting by hand
F2 automatic time timemeasurement

**Manual setting / Automatic:** Pressing F1 or F2 in “Reset mode auto / man“ gets to the selection menu to input the data for delay or duration time by hand or to set automatically.  
**„F1 Setting by hand“:** If delay and duration time is known or very short it is recommended to input the data manually.  
**„F2 Automatic time measurement“:** In case of long delay and duration time this menu will assist to find out the delay and duration time during system set up. A piece of metal is passed through the detector and triggers the time measurement system.  
 Press the appropriate key when the metal arrives the diverter unit.

hand adjustment			
delay time:	###.## s		
duration:	##.## s		
-	+	▲	O.K.

**Hand adjustment:** This menu appears after pressing F1 „Setting by hand“ to set the delay time and duration time of the outputs. Use + / - keys to input data.  
 When „Auto reset“ was chosen the keys ▼ ▲ are used to select delay time or duration time set.  
 If one product has been already programmed the parameters set for this product are used as default parameters.  
 „O.K.“ returns to „Reset mode auto / man“.

delay time:	###.## s
duration:	##.## s
convey metal piece	
F1 reject activation	
F2 repeat	
F3 previous menu	
F4 fine adjustment	

**Convey metal piece:** When choosing F2 „ Automatic time measurement“ the value for delay time (and duration time) can be determined by a stop watch function. The display will change related to the context.  
**Instruction:**

- The default values are displayed and the operator is requested to convey a piece of metal through the detector.
- As soon as the metal is detected the stop watch is triggered to measure the delay time. When the metal piece arrives the ejector press key F1 „Eject“.
- The metal outputs are activated and the stop watch is stopped.  
 If **Manual Reset** was chosen then the outputs stay activated until anyone of the keys is pressed.  
 If **Automatic Reset** has been chosen then the stop watch starts and runs again as long as the key F1 is pressed. This action determines the output duration time. Then the outputs are reset
- The procedure step 1 to 3 can be repeated by pressing F2.
- F4 allows fine adjustment by hand.
- F3 gets to menu „Reset mode Auto / Manu“. The set values are cancelled.

fine adjustment			
delay time:	##.## s		
duration:	##.## s		
-	+	▲	O.K.

Fine adjustment: After Selection of F4 and „Convey metal piece“ the determined values can be adjusted by hand. See also „Hand adjustment“. „O.K.“ returns to „Product teach-in“ menu.

Distance measurement setting for belt conveyor application

The same procedure as 0 „Timer setting for belt conveyor application“ but the input of seconds changes to millimeters.

The distance between detector head and rejector can be measured by means of a measuring tape and this value can be set directly (assuming that the parameter mm/ pulse was set correctly in Setup menu see 6.3.11).

When using a light barrier for synchronization (preset on request) the distance between the light barrier and the ejector is decisive.

Setting of the outputs

Output adjust
F1 M by Fault:yes
F2 low-aktiv : no
F3 Flip-Flop : no
F4 last menu

Menu configuration: after selecting „configuration“ in menu „Reset auto / man“ the outputs can be set as follows:

„**F1 M at F**“: (Metal alarm in case of Fault) if “yes” is selected then the metal relay is activated additionally to the fault relay.

„**F2 Low-active**“: If “yes” is chosen then the output for the magnetic valve is switched to 0VDC when activated.

**Operation mode Belt Conveyor:**

„**F3 Flip-Flop**“: If set to „Yes“ the 24V outputs controls a pusher that way that the contaminated product is one time rejected to the left and next time to the right.

**Operation mode Pipe Conveyor:**


„**F3 Rel1-Man**“: If set to „Yes“ the relay „Metal 1“ is set. It is reset when the RESET button is pressed (even if Reset auto has been programmed).

„**F4 Last menu**“: returns to menu „Reset Auto / Manu“.



Although the above settings can be done for each single product, but done only for product they are used automatically for all others. The parameters have to be set for the first product at the teach-in procedure. If products are added to the product memory, the above parameters are set automatically as preset parameters.

6.4.2.7 Activation of performance validation and scheduled testing

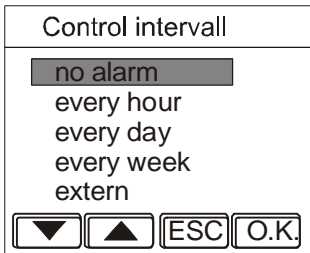

Control interval: select „test interval“ in menu “teach in product 2”. The alarm mode is chosen by using ▼ and ▲ followed by „O.K.“. Selection of „No alarm“ or pressing key „ESC“ returns to menu “teach in product 2”.

Selection of „**every hour**“ causes a self check alarm every hour. When chosen, the menu „Performance check“ (see below) appears automatically.


Selection of „**every day**“ causes a self check routine at a certain hour of a day.

Automatically the menu to input the requested „Alarm time“ appears (see above, „Set time“), then the menu „Performance check“ (see below) appears.

„**every week**“ is identically to „daily“ but in addition the requested day of the week have to be programmed.

(For more details see also 7).

„**Extern**“: the performance check is called, if the input LS is activated (see 5.2.2).

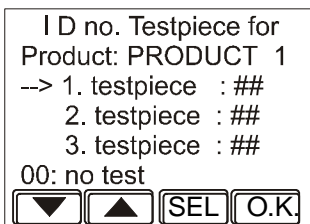

Performance Check: This menu appears automatically, when „Control interval“ was selected. The performance validation is carried out by putting prepared metallic test pieces through the detector.

For each product up to three different test pieces can be set. If only one test piece is used set test piece 2 and 3 to 00.


Use key „SEL“ to select test piece 1, 2 or 3 and set the identification number

(00 .. 99) with ▼ and ▲.

Pressing „O.K.“ get to menu “teach in product 2”.

(For more information see also 7).

6.5 Menu Product change

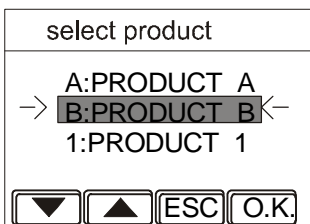

Select product: after selecting „Product change“ the number of products which were already stored are listed.

Use keys ▼ and ▲ to select a stored product. „O.K.“ confirms the selection.

„ESC“ returns to operation mask, inputs are ignored.

**Note:** Pressing „O.K.“ without changing the product number (i.e. change from product 1 to product 1) is interpreted as new „batch“ which resets the counter for number of metal detections and faults to.

## 7 The use of the GENIUS metal detector for quality insurance

To meet the requirements of the Total Quality Management and of the HACCP, GENIUS provides beside the printout capabilities of logged data (see separate operational manual for the serial interface) a performance interval check system.

### 7.1 Instruction for setting the performance test intervals

1. Teach-in product
2. Convey product with a metallic test piece, which have to be detected. Mark the metallic test piece with a number between 1 and 99.
3. If necessary repeat this procedure one or two times, and mark them with numbers. If only one metallic test piece is used input the number 0 for the second and third.
4. In menu "Control interval (see 6.4.2.7) select „Alarm mode“. The interval is selectable between hourly, daily and weekly performance check. If daily or weekly check interval has been selected, then the hour has to be programmed, too. If the hourly check has been selected the performance validation check is requested every full hour.
5. Finally set for the product to be inspected the test piece numbers.
6. If several GENIUS, equipped with the serial interface, are in operation name each device and line in the Setup that each system can be identified easily. (see 6.3.8 and operational manual Control Unit GENIUS option serial interface).
7. Use also user identification numbers for the operators to be identified later on the performance check report.

### 7.2 Carrying out a performance validation

Audit Check demand!			
Enter User-ID:			
####			
▼	▲	→	O.K.

If the system clock is equal to the set time then the green LED („operation“) is blinking, the digital output LB is set to High (see chapter 5.2.2) and the operator is requested to input his user identification number.

At the same time „test request“ is recorded in the log book data base. The test is started with „O.K“.

audit-check	No.#
convey testpiece #	
F1 : detected	
F2 : not detected	

The operator is requested to convey the numbered test piece and to watch whether it is detected or not.

The detection is shown on the display for 1 sec „\*\* DETECT \*\*“

Confirm by F1 or F2 (it is also possible to convey the test piece several times at different areas of the aperture).

**Note: The operator is responsible to use the requested and set test piece.**

**The metal detector is not verifying the kind of metal piece used for this procedure.**

Three different test pieces (i.e. three different kind of metals) can be used according to the set test procedure.

All events during the entire test procedure are stored in the event data base.

The test is finished after selection of F1 or F2 and skips to the operating mask (except mode „Printer portable“ was selected, see below)

The test results can be displayed when selecting the logbook (see operational manual Control Unit GENIUS option serial interface)

## 8 Errors and error remedying



If you should have any questions, please state the equipment type and serial number!

### 8.1 Error messages

Error messages are indicated by the red LED „Fault“ located on the panel and the fault relay is released (see 5.2.1). In addition the metal alarm relay of the conventional design is released, too.

#### 8.1.1 Interface to evaluation unit interrupted

This message appears if the data interchange between evaluation board (see spare parts view 9.1 No.4) and controller unit is interrupted.

Possible causes	Remedy
Data communication cable between evaluation electronics board and control electronics board is broken.	Check cable and connectors with ohmmeter; Replace cable, if necessary
Interface module broken.	Replace evaluation electronics board and control electronics board

#### 8.1.2 Transmitter or receiver faulty

This message appears, if either the transmitter voltage or the receiver voltage is very low.

Possible causes	Remedy
Broken transmitter connecting cable	Connector (3) „transmitter“ at the evaluation board (see 3.2.3), switch off and on. If still failure, replace evaluation board and/ or transmitter cable.
Broken search coil	Check search coil for mechanical damage; Replace the search coil, if necessary

#### 8.1.3 Receiver voltage too high

This message appears if the RF voltage at the receiver is too high.

Possible causes	Remedy
Big metal part (e.g. aluminum ladder, screwdriver, hammer, bracelets) directly beside or in the detection coil.	Check the detector head and the surrounding. Sometimes metal parts can be found inside or underneath the belt.
Improper installation of the search coil	See Op. Man Detection coil: „Installation If detector head DLS is used, check on loose centering pins or fastening bolts.

#### 8.1.4 Battery voltage too low

Possible causes	Remedy
The buffer battery (see 3.2.2) located on the controller board is flat.	Contact TecTronix Systems service

#### 8.1.5 24V switching output overload

Possible causes	Remedy
Short circuit at the connection cable to magnetic valve of the reject unit	<ul style="list-style-type: none"> <li>Check cable and plug of short circuit with ohmmeter (if necessary replace cable)</li> <li>Check the resistance of the magnetic valve, which is 320...340 <math>\Omega</math> ( or 100...140 <math>\Omega</math> for pusher application).</li> </ul>

## 8. Errors and error remedying

### 8.1.6 Datememory not existing

Possible causes	Remedy
Appears after POWER ON. The device data memory (see 3.2.2 and 8.3.1) is either not existing or damaged.	Switch off power. Open electronics housing and check, if the memory device exists and is properly fixed

### 8.1.7 Compressed Air

Possible causes	Remedy
Appears on display if the air pressure monitor responds or the connection to the sensor is interrupted.	<p>Extend the air pressure recovery time</p> <p>Check the air pressure. Minimum value 2 bar. Increase, if necessary.</p> <p>Check the cable to the air pressure monitor. Switch off Power, open housing. Check with meter at connector 6a (24V) and 7a terminal i2 (see 3.2.2).</p> <p>With connected compressed air : &lt; 20 Ω</p> <p>Without compressed air connected: open</p> <p>If not, replace sensor and/or cable</p>


### 8.1.8 Not rejected

Possible causes	Remedy
<p>Appears, after rejection, if no signal was sent by light barrier.</p> <p>Causes:</p> <p>Product was not rejected</p> <p>was not detected by the light barrier</p> <p>Sensor connecting cable broken</p>	<p>Adjust delay time and reject duration time properly</p> <p>If the error repeats, check sensor and/or connection cable</p>

### 8.1.9 Reject box full

Possible causes	Remedy
<p>Appears, if the light barrier is blocked by products.</p> <p>A short circuit in the connection cable causes the same error message</p>	<p>Empty the reject box.</p> <p>If reject box is empty and the error message is not resettable, check the connection cable</p>

### 8.1.10 Diverter Position


Possible causes	Remedy
<p>Appears during reject operation of the diverter, if signal timing is not correct,</p> <p>diverter is broken</p> <p>diverter too slow</p>	<p>Fix the diverter mechanics</p> <p>Check diverter if tight or wedged pieces</p> <p>Check air pressure (min. 5 bars)</p> <p> Caution! Danger of accident! Disconnect air supply!</p>
<p>Forward and return time set too short (see 6.3.13)</p> <p>Connection to the sensors defective</p>	<p>Prolong the time settings</p> <p>Check cable and sensors</p>

## 8.2 Un-definable activation of the switching outputs

Possible causes	Remedy
Improper installation of the search coil	See operational manual detector coil: „Mounting“
<p><b>With conveyor systems:</b>                      Open and close electric circuits at the frame of the conveyor system, e.g. due to:</p> <ul style="list-style-type: none"> <li>• loose guide plates</li> <li>• loose screw connections at frame parts</li> </ul> <p>Changing contact resistance at the bearings of the tensioning and deflection pulleys or the drive pulley</p> <p>Individual locations of the conveyor belt are conductive:</p> <ul style="list-style-type: none"> <li>• Metallic impurities (welding spatter, metal chips, abraded matter...)</li> <li>• Belt junction causes metal alarms</li> </ul>	<p>Check and tighten all screw connections.                      If necessary, weld frame parts.</p> <p>Insulate at one side, cross struts, tension and deflection rollers</p> <p>Remove residues from the conveyor belt</p> <p>If necessary, replace the conveyor belt</p>
<p><b>With round coils:</b>                      Mechanical contact between scanning pipe and search coil</p>	A gap of at minimum 10 mm have to be kept between scanning pipe and detector coil.
Sensitivity too high	Repeat product teach in procedure (see 6.4.2.2) Reduce sensitivity manually
Metal particles hard to identify due to corrosion or encapsulation.	Check carefully the processed material if necessary inspect again.
Loose contact at the coil cables	Check the connections
High static charging of the material (possibly audible clicking sound at the detection coil)	Avoid static charging by additional grounding measures (contact TecTronix Systems service!) Use of de-ionizing equipment

### 8.3 Replacement of electronic boards

The Control-Unit GENIUS consists of the following three boards: **Control electronics board (3)**, **evaluation electronics board (5)** and **display board (8)**.

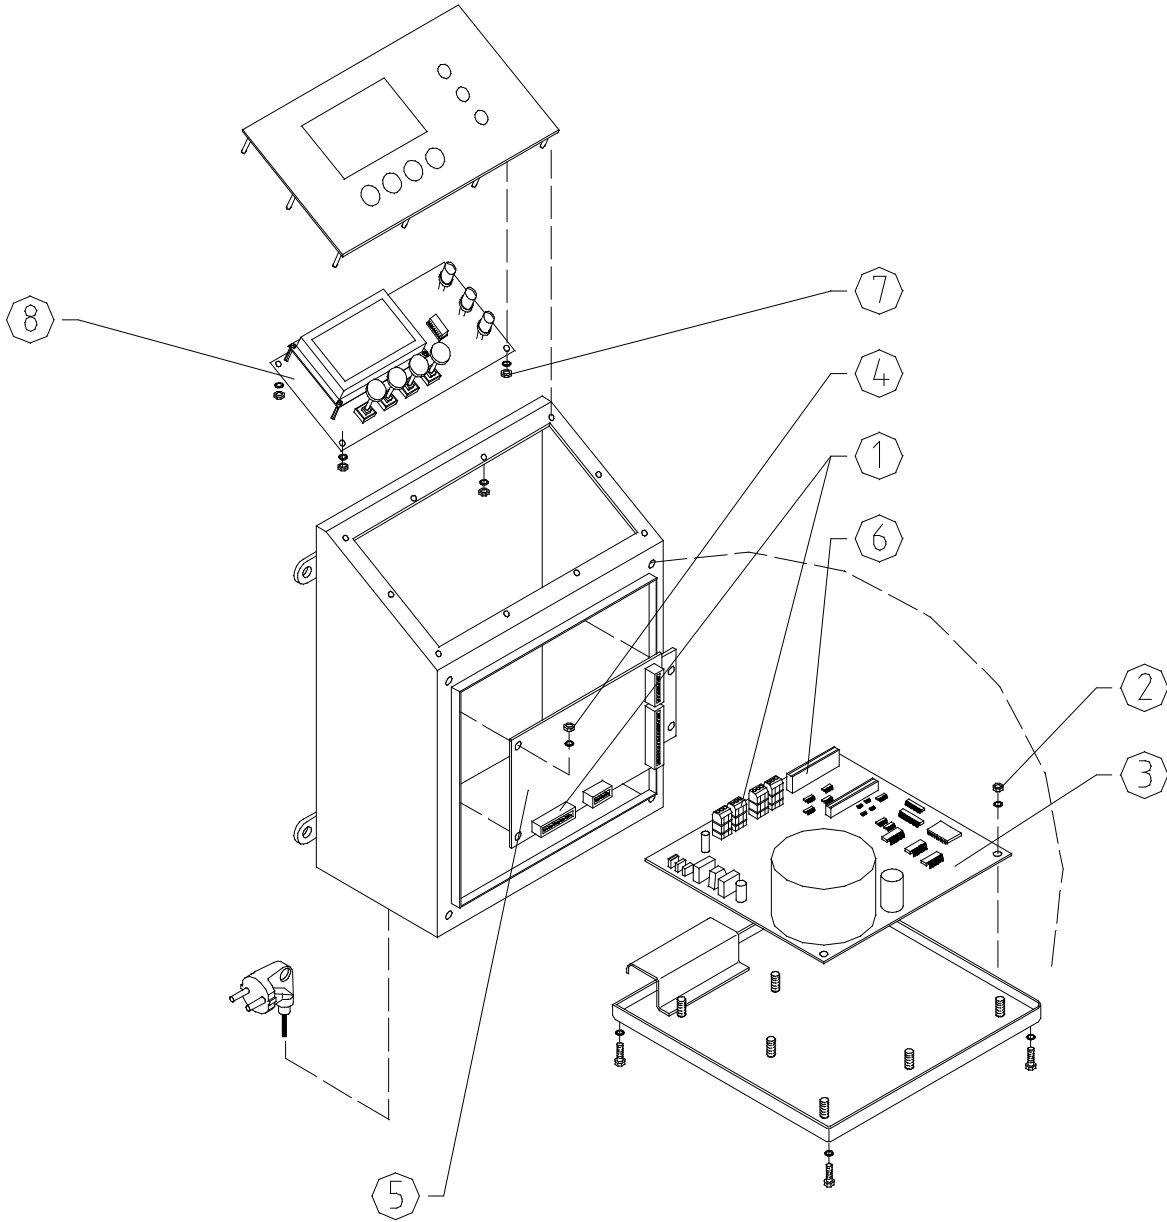




### 8.3.1 Replacing the control electronics board

1. Disconnect voltage supply and open the cover at the electronics housing
2. Remove connectors (1) and remove the fastening screws (2)
3. Take out the control electronics board (3)
4. Install the new board in reverse order, but **do not connect mains power supply!**



The data memory is located on the STE controller board. The memory contains all device and product parameter settings.  
If this memory device is transferred to a new board no new settings must be performed.

Replacement of the Data Memory:

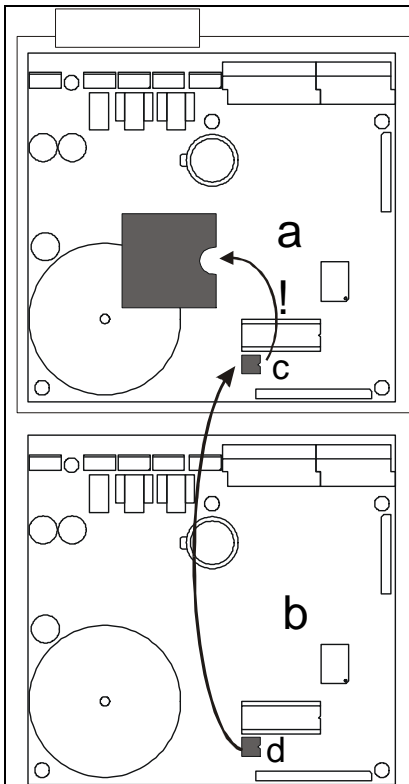

- a: New controller board
- b: Old controller board
- c, d: Device and program memory

Instruction:

1. Remove data memory device c) from the board
2. Remove data memory d) from the old board b) and plug it carefully into the new board a)
3. Check that the marking on. The memory device points to the right
4. Switch on power supply. The new board runs with the „old“ adjustments.



Date, time and recorded events in the logbook are not transferred, when changing the Data memory device.

### 8.3.2 Replacing the evaluation electronics board

1. Disconnect voltage supply and open the cover at the electronics housing
2. Remove the used connectors (1) and remove the fastening screws (4)
3. Take out the evaluation electronics board (5)
4. Install the new board in reverse order!


### 8.3.3 Replacing the display board

1. Disconnect voltage supply and open the cover at the electronics housing
2. Remove the used connectors (6) and remove the fastening screws (7)
3. Take out the display board (8)
4. Install the new board in reverse order!

## 9 Spare parts, service

If you should have any questions please state equipment type and serial number!

### 9.1 Spare parts view

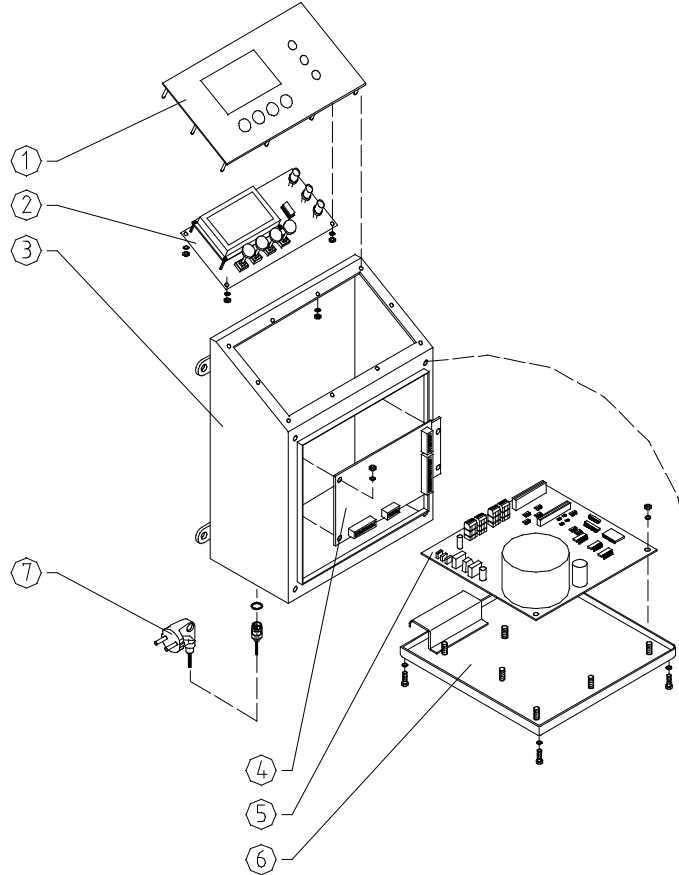

### 9.2 Spare parts list

Pos. No.	Article	Art. No.	Comment / DWG No.
1	Display cover GENIUS	33001496	
2	Display board GENIUS	44001078	
3	Electronics housing GENIUS mounted to the detector head	08016739	
3	Electronics housing GENIUS remote	08016755	
4	Evaluation electronics board GENIUS	44001036	
5	Control electronics board GENIUS	44001030	
6	Housing cover	08016712	
7	Mains cable EMC	04015479	
8	Flat cable for display (not shown)	04106300	

### 9.3 Accessories

Article	Art. No.	Comment / DWG No.
Portable printer	33002530	
Central Data Management INSIGHT		
Interface cable RS232 for printer / length 1 meter	04017994	
Interface cable RS232 for PC	44001060	length on demand

9. Spare parts, service

---

Interface cable RS485 for PC /INSIGHT	44001038	length on demand
---------------------------------------	----------	------------------

#### **9.4 Service address**

##### Manufacturer's

Surround TecTronix inc.  
26688 56<sup>th</sup> Avenue  
Langley, British Columbia  
Canada, V4W 3X5

Telephone: (001) 604 607-6028  
Fax: (001) 604 607-6026  
E-mail: [service@surrtec.com](mailto:service@surrtec.com)

## 10 Shipping, transport, storing, preservation

1. Choose packing that is suitable for type and size of the shipment for export, sea or airfreight, national or international road transport. The packing must be chosen such that under normal transport conditions the goods cannot be damaged.
  
2. Depending on the size, weight and nature of the goods shipments are only packed suitable for road transport in cartons, carton pallets, etc.  
As filling and protection material in the packing reinforced carton, corrugated cardboard, air cushion foil and paper chips are used.  
Static sensitive components (electronic boards, electr. modules, etc.) must be packed in antistatic foil or bags prior to packing (**this is essential**).  
On the outside of the packing additional warning labels such as: Attention, electronic equipment, do not Drop“, etc., must be applied. The packing is sealed with adhesive tape and, in case of weights of more than 50 kg, additionally with wrapping tape.
  
- 2a. International road transport shipments are packed in accordance with point 2, larger and heavier shipments depending on the protection they require, are also protected against corrosion inside the packing. Easily corroding parts must be packed in oil-paper or corrosion-protection foil prior to packing. Care must be taken that inside the packing the packed components are protected against slipping.
  
- 2b. International air-freight shipments must be packed in wooden crates or in export pallets. Care must be taken that the goods are well fixed and protected inside the packing.  
Susceptible parts must be protected against corrosion (oil-paper, protective foil, corrosion spray, etc.)
  
- 2c. Sea-freight shipments must be packed in seaworthy export crates. These special crates may be obtained from special manufacturers.  
The crates must be lined with oil-paper to make them resistant to sea-water and corrosion.  
In addition the goods must be protected against corrosion by spray or protective foil.  
Care must be taken that inside the crate the goods are protected against slipping.  
After packing the sea-freight crates must be properly closed.

During loading care must be taken that the shipments are protected.  
Proper acceptance and loading of the shipment must be certified by the carrier on the bill of lading, loading list, etc.

## 11 Index

### A

Accessories ..... 41  
 Alarm mode ..... 35  
 Alarm time ..... 34

### B

Board No ..... 21

### C

CE-conformity ..... 14  
 Connecting cable ..... 14  
 Connector assignment .... 14  
 Connectors ..... 11, 12  
 Contactor controls ..... 14  
 Control interval ..... 34  
 Controller board STE ..... 11  
 Conveying speed ..... 28  
 Current load ..... 16

### D

Delay ..... 31  
 Detector adjustment ..... 21  
 Distance between detectors  
 ..... 14  
 Distance measurement ... 33

### E

Eject duration ..... 31  
 Electrical connection ..... 15

Elements under mains  
 voltage ..... 11

Elements under possible  
 external voltage ..... 11

Evaluation electronics board  
 AWE ..... 12

### F

Free-fall ..... 32  
 Frequency converter ..... 14

### I

Inputs ..... 16  
 Interference fields ..... 14

### L

Language ..... 19  
 Level monitoring ..... 25  
 Log book ..... 22

### M

Manual parameter setting ... 30  
 Measuring ..... 24  
 Memory ..... 11  
 Metal mask ..... 20

### O

Operating mask ..... 20  
 Operating modes ..... 28  
 Outputs ..... 16, 31

### P

Performance test interval 35  
 Product angle ..... 27  
 Product change ..... 34  
 Product name ..... 31  
 Product phase angle ..... 30

### Q

Quality insurance ..... 35

### R

Reject monitoring ..... 25  
 Relay contact ..... 16  
 Reset mode ..... 31

### S

Select product ..... 27  
 Sensitivity ..... 30  
 Setting menu ..... 20  
 Software version ..... 21  
 Spare ..... 41  
 Spare parts list ..... 41  
 Static charging ..... 38

### T

Teach in procedure ..... 29  
 Test points ..... 12  
 Test push ..... 15  
 Time measurement ..... 32  
 Time measurement ..... 32